

BIOFIX DENTAL

S.O.S. SET

1 Implant with broken screw below the occlusal surface of the implants.

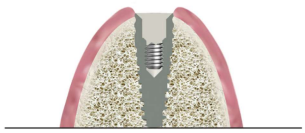


2 Place the drill guide (SG-172) in the implant hex.

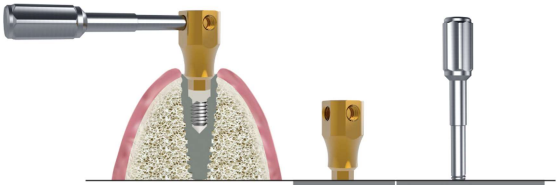

SG-172 SOS Guide


OLCH-2000 Orientation Lead Screw Holder

3 Place the SOS Climb Drill 2T (SCD-172) in the guide. The speed must be under 80Rpm. Counter clockwise direction.

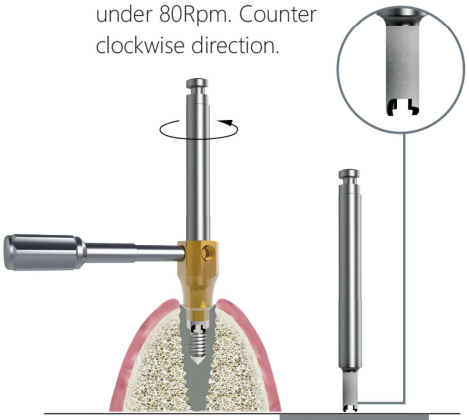


SCD-172 SOS Climb Drill 2T

4 Place the SOS Drill 1T (SCD-171) in the guide. Counter clockwise direction. Drilling speed: 50Rpm.

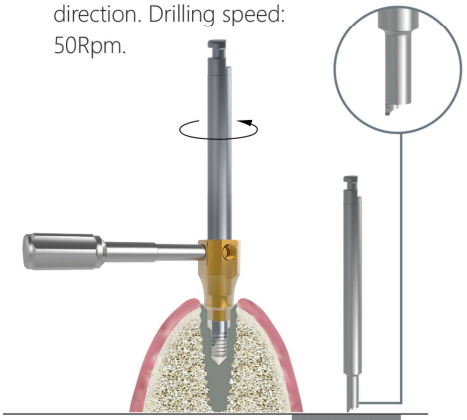

SCD-171 SOS Drill 1T

5 Take the broken screw out!

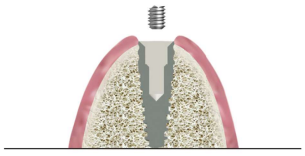



S.O.S. KIT - Screw Out Set

LBL0071 - Rev1 03/03/2019